
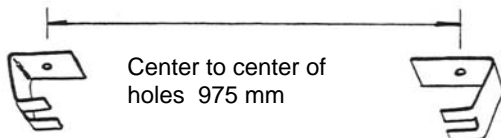


### Ceiling absorber (Wire basket with high edges and air space)


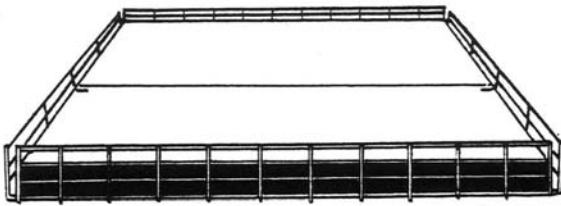


1.) Measure the area of the ceiling where the absorbers are to be mounted. Make sure the positioning is as even as possible.


2.) Measure and screw 4 hooks onto each wire basket.

3.) Hang the **the second wire** of the basket's long side on the hooks (do one long side at a time, that is easier).

4.) Fasten the wire basket by bending the hooks between the horizontal wires (according to fig.)

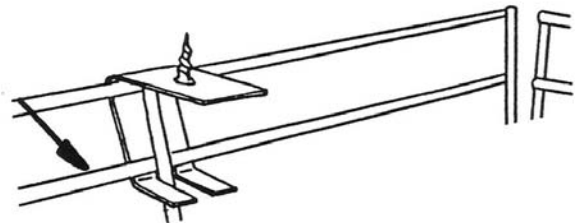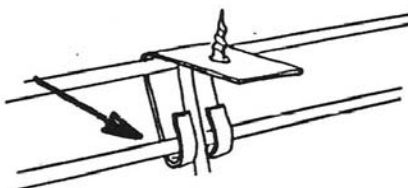

### Wall absorber (Wire basket with low edges mounted to wall without air space)

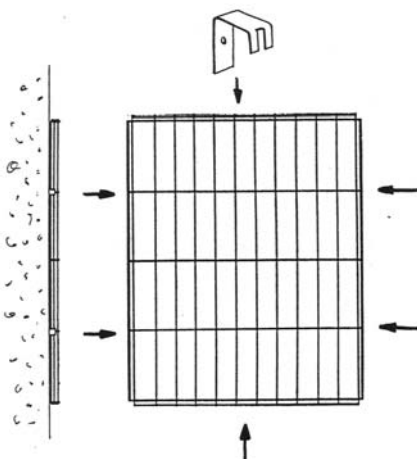

1.) Measure the area of the wall where the absorbers are to be mounted and the distance between the absorbers.

2.) Measure and screw 4 hooks onto each wire basket. Make sure they are positioned in a straight line.

3.) Mount the wire basket in the same way as above (the hooks on the second wire, bended as they keep the wire basket in its position).

4.) Mount another 2 hooks (one on the upper side, one on the underside).